


Cut two strip 1.5" and .75", one each .5" and .25" wide by the length of the board ~26"-28"  
 Glue the .5" piece along one long edge of the 1.5" piece and glue the .25" piece to the .75" piece. Leave them unglued in the last ~4"

Trim up the pattern pieces and transfer the pattern to the board and cut the pieces. At this point do not cut the "V".

Glue the smaller bottom into the center of the larger bottom do the same with the top pieces. Cut the "V"s. Fold up the tabs between the "V".

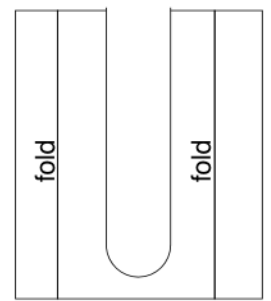


Cut two of board

Bend the 1.5" X 26" without the added .5" strip along the outside edge of the bottom, Glue the tabs to hold the side in place. Trim the overlap on the sides of the box down to about 1/2". Repeat with the top and the .75" strip.




Cut out a piece of fabric large enough for the top and bottom with about 1/2" seam allowance and two lengths of fabric for the sides with added strips that equal the length plus twice the width.

Cover the top and the bottom by adding glue in the tab area and folding the fabric seam allowance into it.

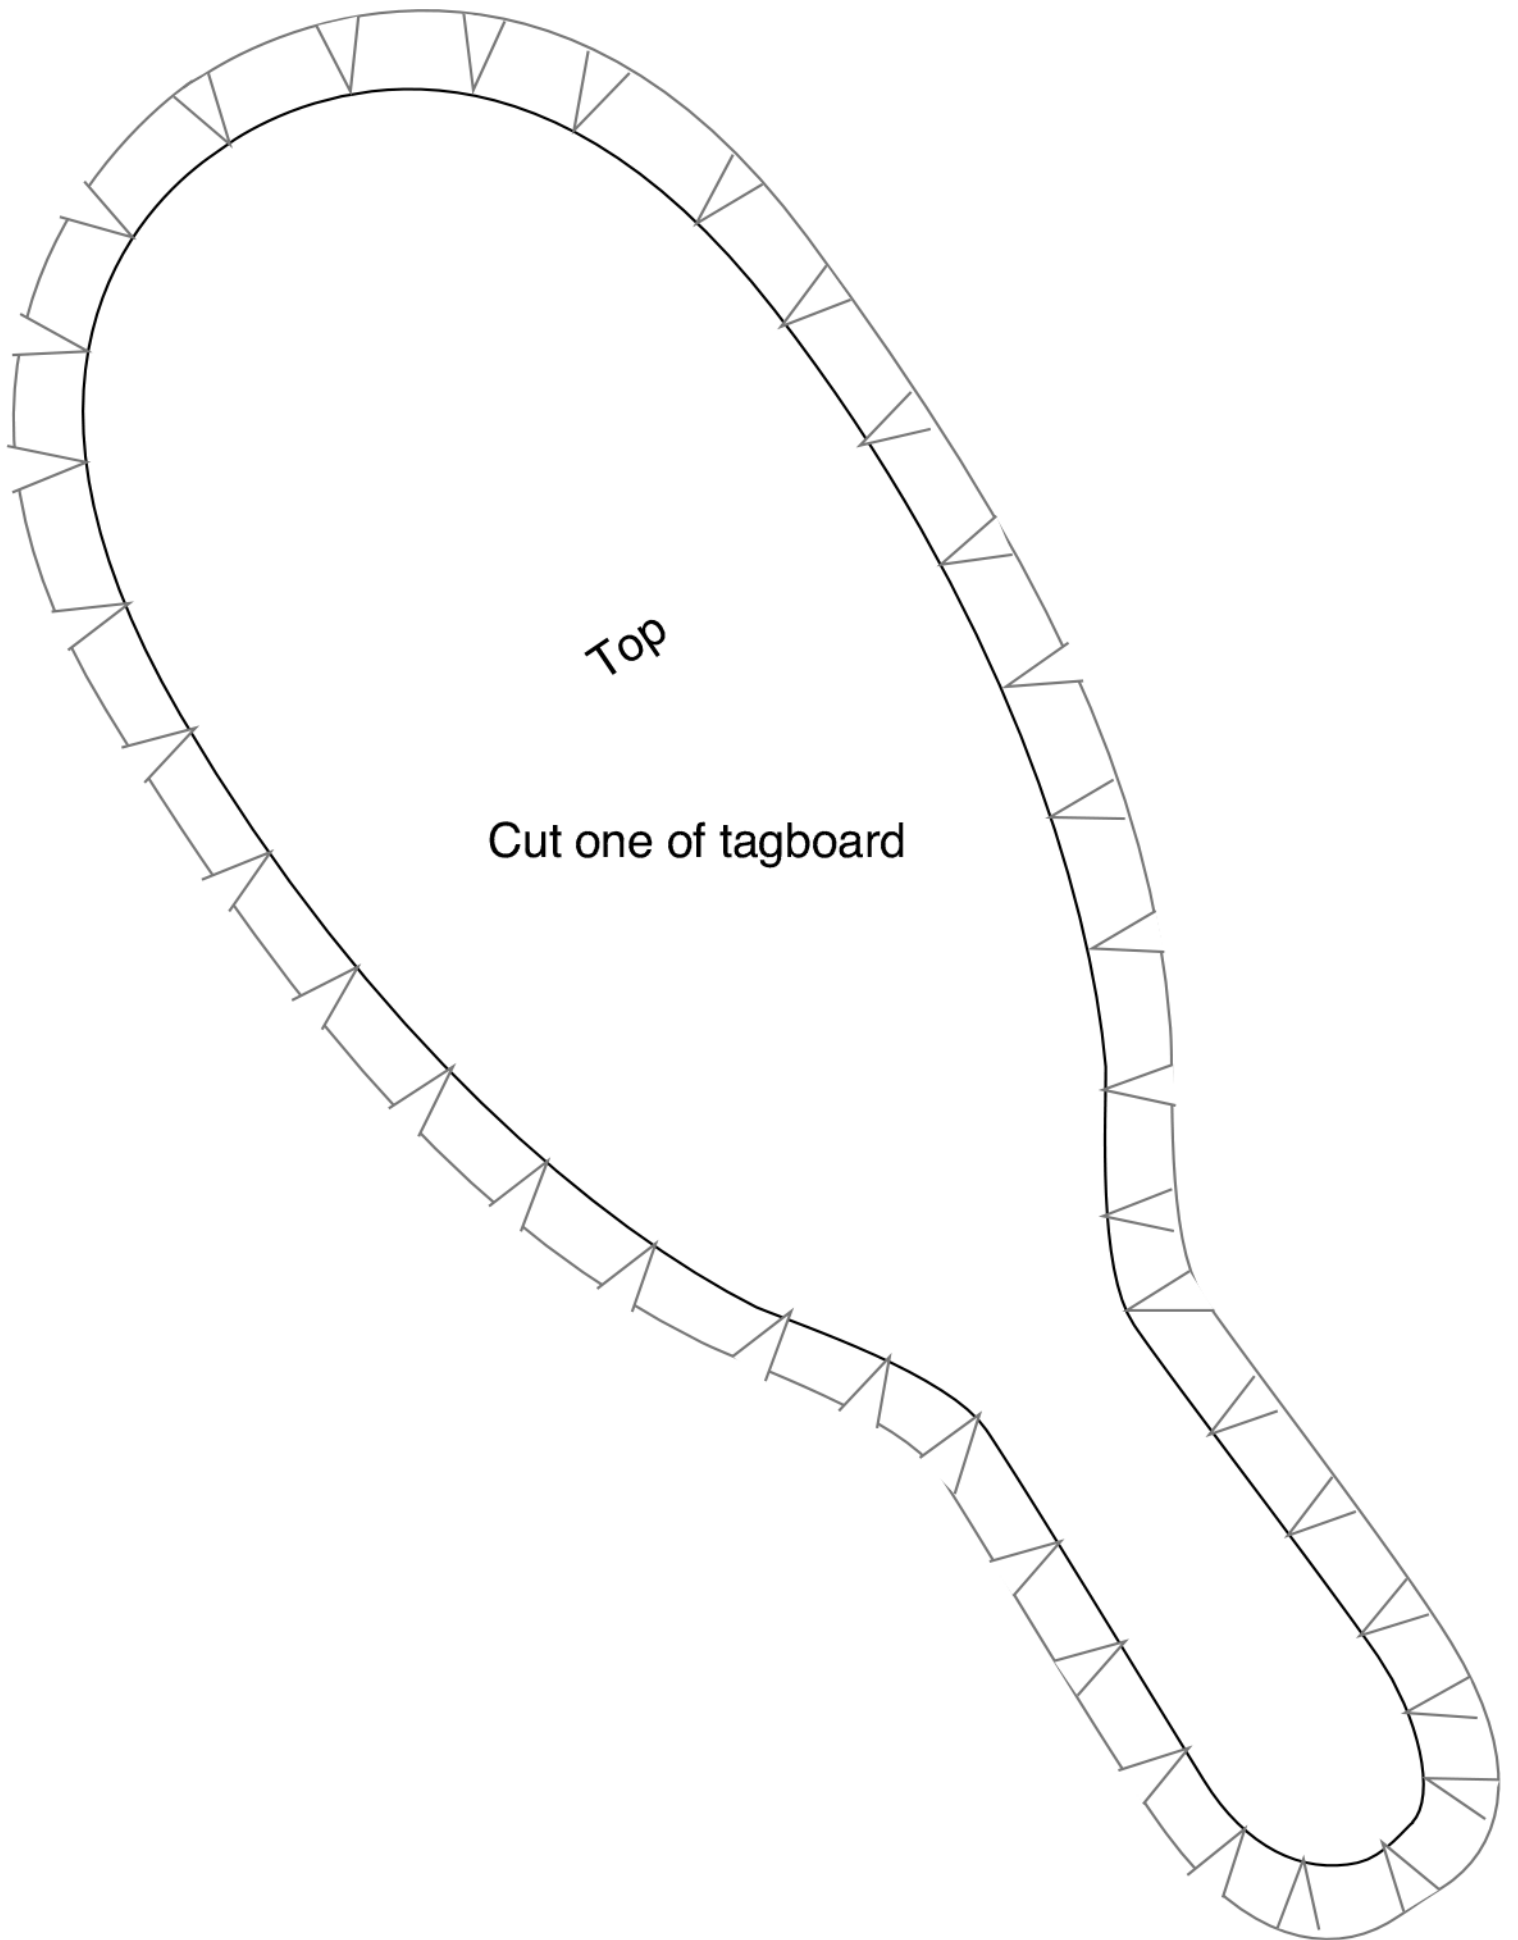


Top

Cut one of tagboard

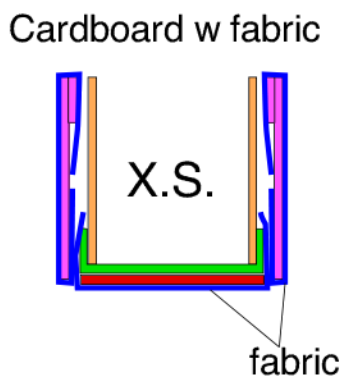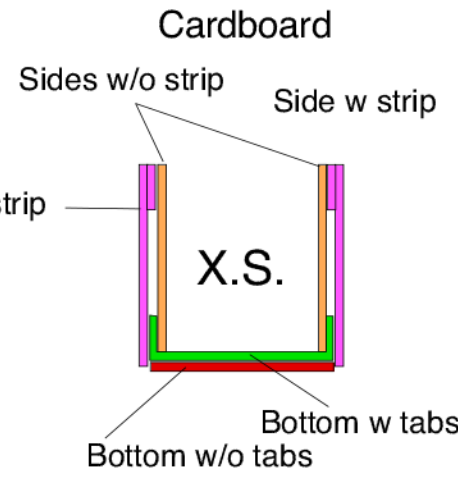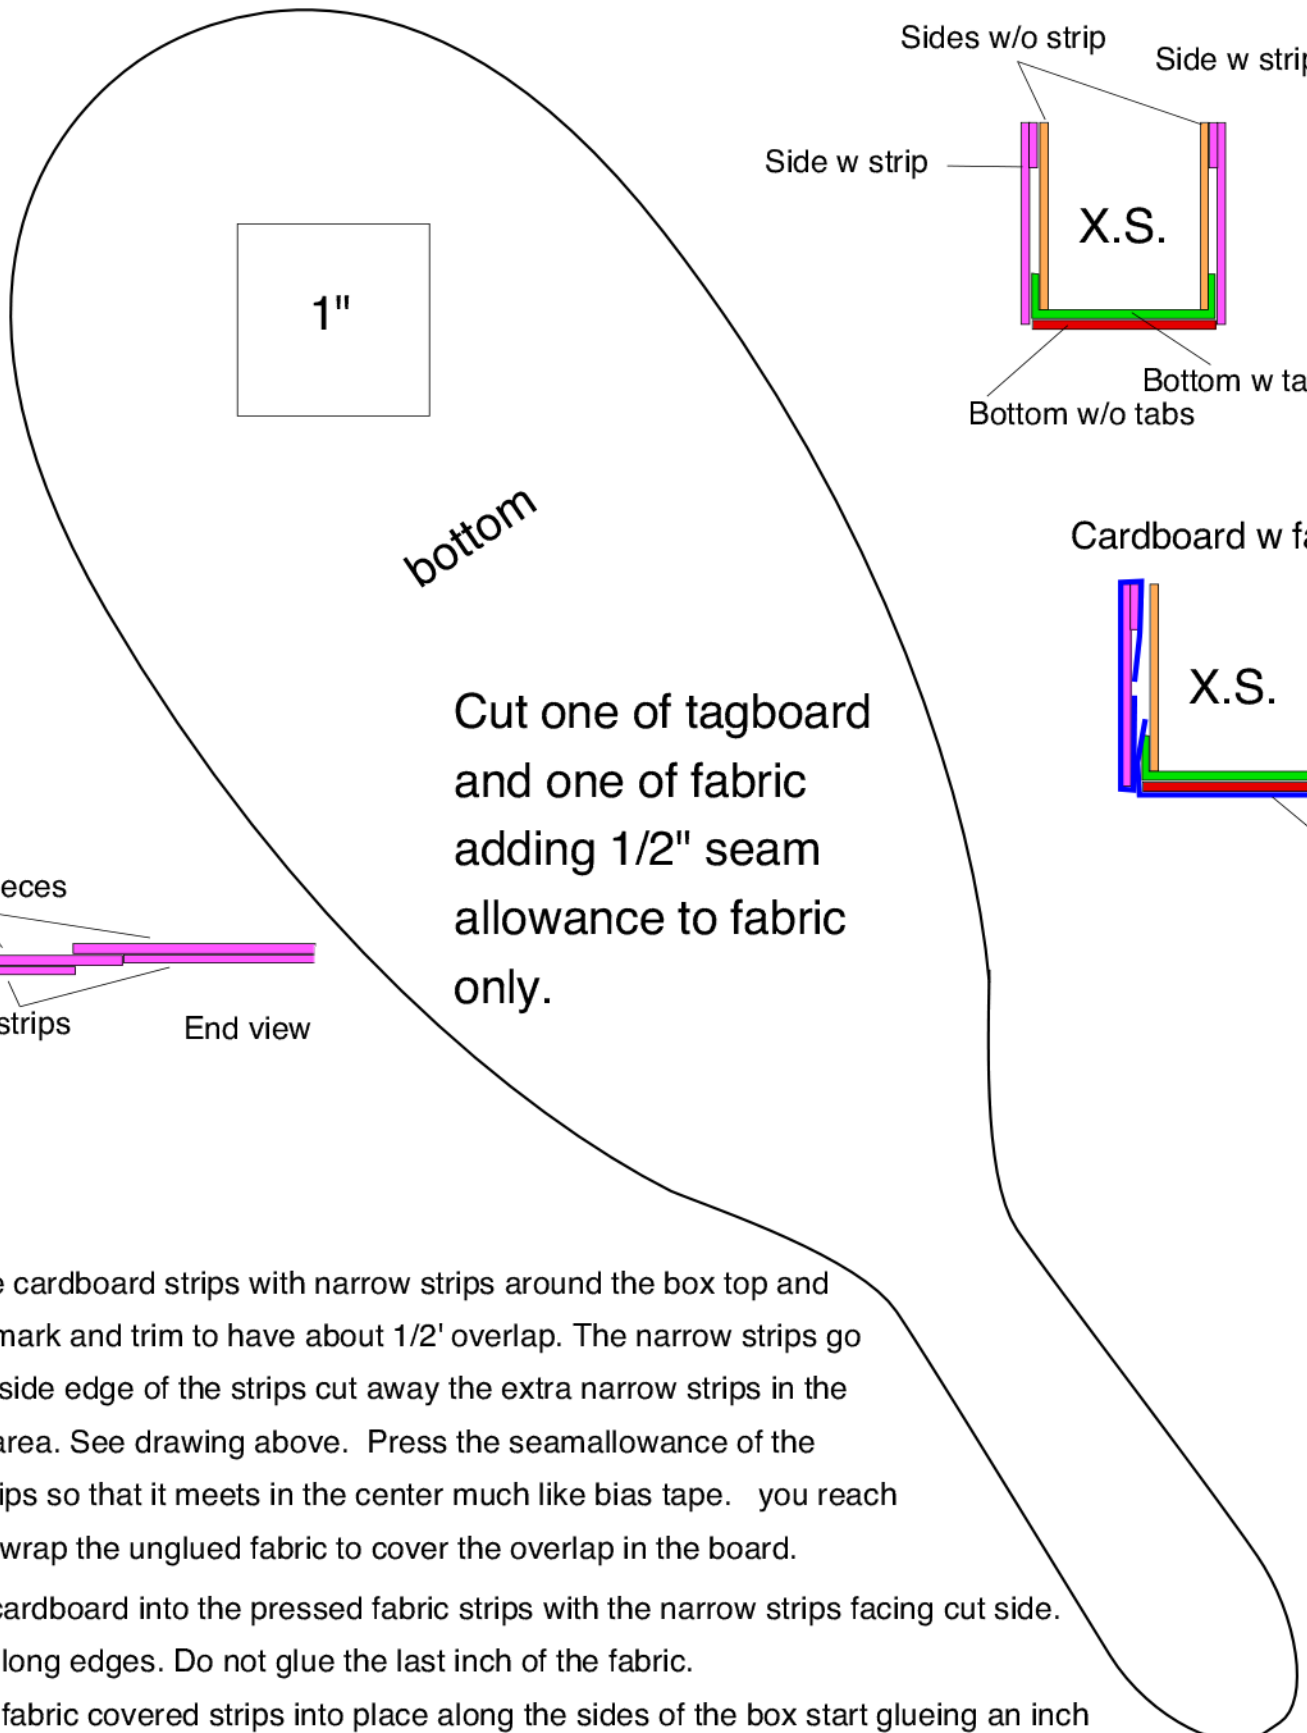

Cut one of tagboard and one of fabric adding 1/2" seam allowance to fabric only.

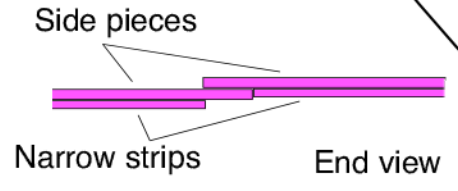


## Sides

Wrap the cardboard strips with narrow strips around the box top and bottom, mark and trim to have about 1/2" overlap. The narrow strips go on the inside edge of the strips cut away the extra narrow strips in the overlap area. See drawing above. Press the seam allowance of the fabric strips so that it meets in the center much like bias tape. you reach the start wrap the unglued fabric to cover the overlap in the board.

Slip the cardboard into the pressed fabric strips with the narrow strips facing cut side. Glue the long edges. Do not glue the last inch of the fabric.

Glue the fabric covered strips into place along the sides of the box start glueing an inch or so from one end when

Cut two of the handle supports, Glue the center portion between the fold lines together. Fold the outer sections opposite each other. Slip it into the box near the neck add your fan to check for the correct possition of the support. Mark it, remove the fan and glue it into place.

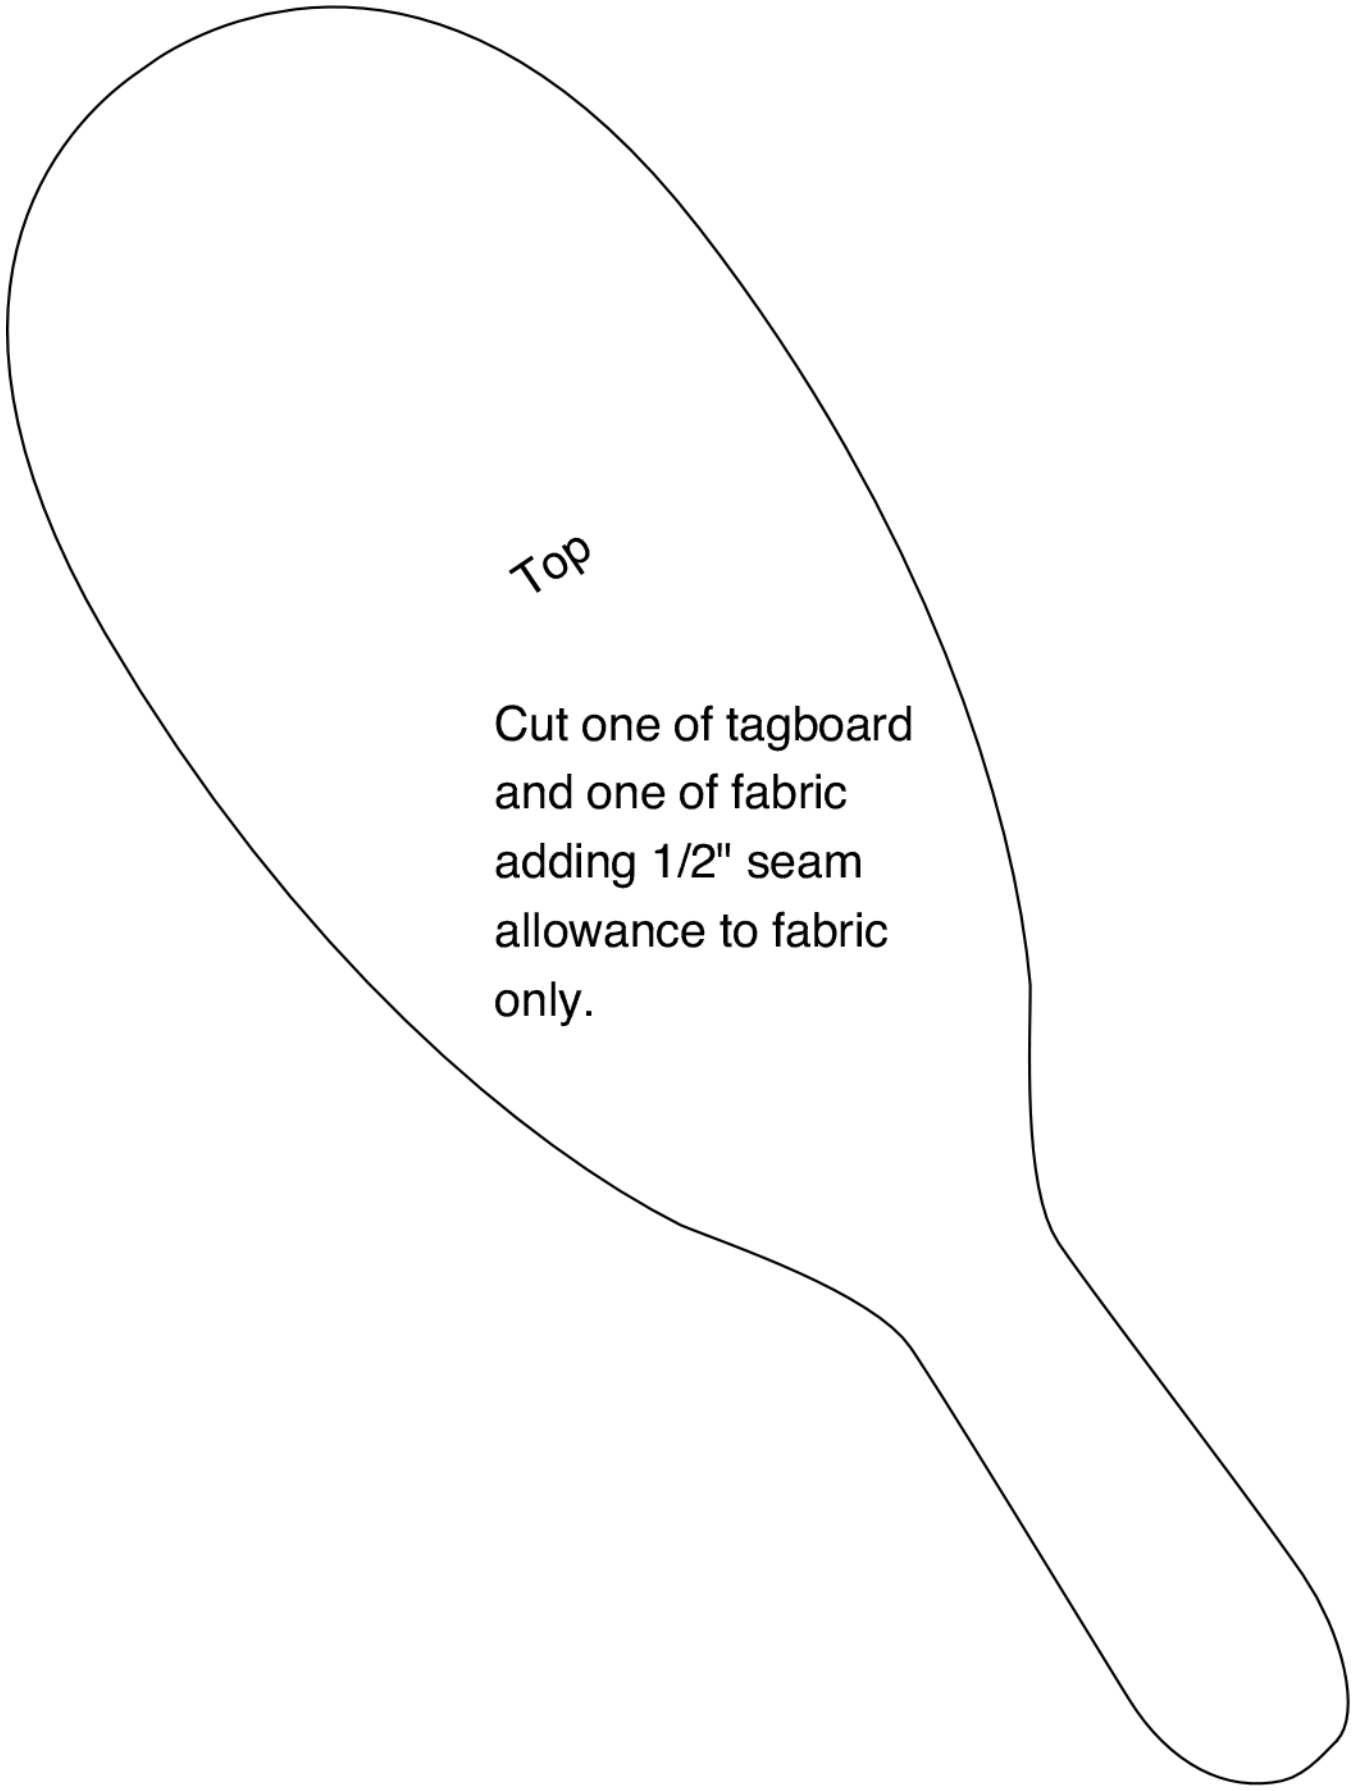

Top

Cut one of tagboard  
and one of fabric  
adding 1/2" seam  
allowance to fabric  
only.